

## User guide

MAGNAVOX  
SMART. VERY SMART.MPC210BL  
MPC210GR  
MPC210SL

PORTABLE CD PLAYER



**STOP!**  
Read this manual first!  
If you have any problems, do not attempt  
to return this product to the store.  
For fast help, call us first!  
1-800-531-0039


**IMPORTANT!**  
Return your Warranty  
Registration Card within 10 days  
of purchase.

PHILIPS CONSUMER ELECTRONICS COMPANY  
A Division of Philips Electronics North America Corporation  
Knoxville, Tennessee 37914-1810, U.S.A.

English



Français

Español

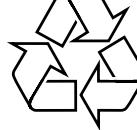Meet Philips at the Internet  
<http://www.philipsusa.com>CLASS 1  
LASER PRODUCT

3140 115 XXXX.1

Printed in Hong Kong

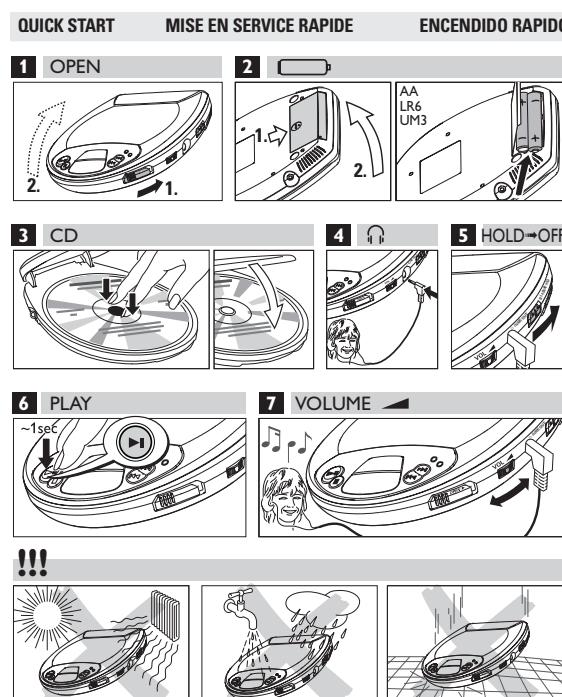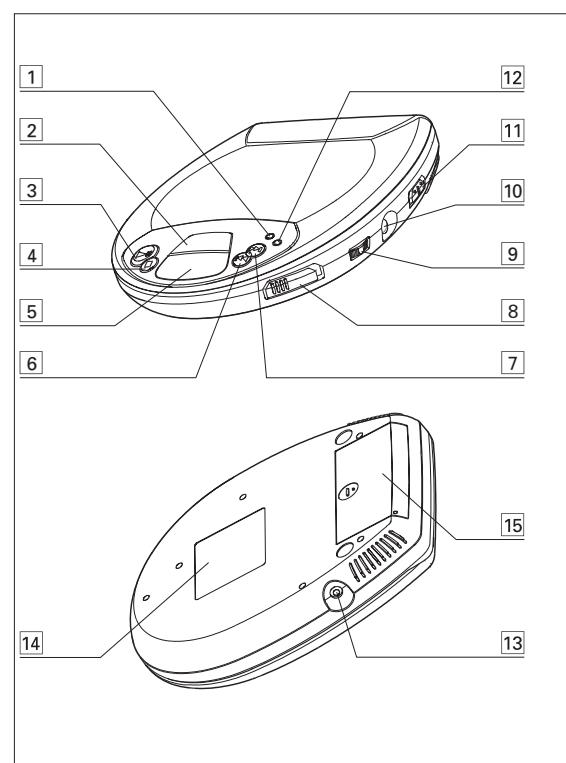

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Only use attachments/accessories specified by the manufacturer.
10. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

**Canada**  
English: This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.  
Français: Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le Règlement sur le Brouillage Radioélectrique édicté par le Ministère des Communications du Canada.

The set complies with the FCC-Rules, Part 15 and with 21 CFR 1040.10. Operation is subject to the following two conditions:  
1. This device may not cause harmful interference; and  
2. This device must accept any interference received, including interference that may cause undesired operation.

L'appareil répond aux normes FCC, Part 15 et 21 CFR 1040.10. Fonctionnement soumis aux deux conditions suivantes :  
1. Cet appareil ne doit pas provoquer d'interférences nuisibles, et  
2. Cet appareil doit accepter toute interférence reçue, y compris les interférences susceptibles de provoquer un fonctionnement peu satisfaisant.

El aparato cumple las normas FCC, Parte 15 y 21 CFR 1040.10. Funcionamiento dependiente de dos condiciones siguientes:  
1. Este aparato no puede provocar interferencia dañina, y  
2. Este aparato debe aceptar cualquier interferencia recibida, incluyendo las interferencias que pueden provocar un funcionamiento insuficiente.

## English

## CONTROLS (see illustration in first column)

- 1 MODE selects the different playing possibilities: SHUFFLE, REPEAT, REPEAT ALL and SCAN
- 2 BASS switches the bass enhancement on and off.
- 3 II switches the player on, starts or pauses CD play
- 4 ■ stops CD play, clears a program or switches the player off
- 5 ■ displays
- 6 < skips and searches backward
- 7 > skips and searches forward
- 8 OPEN opens the CD compartment lid
- 9 VOL adjusts the volume
- 10 G/LINE OUT ... 3.5 mm headphone jack, jack to connect the player to the audio input of an additional appliance
- 11 OFF HOLD off
- 12 PROGRAM programs tracks
- 13 4.5V DC ... jack for external power supply
- 14 typeplate
- 15 battery compartment

**CAUTION**  
Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure.

## CD PLAYER AND CD HANDLING

- Do not touch the lens (A) of the CD player.
- Do not expose the unit, batteries or CDs to humidity, rain, sand or excessive heat (caused by heating equipment or direct sunlight).
- You can clean the CD player with a soft, slightly dampened, lint-free cloth. Do not use any cleaning agents as they may have a corrosive effect.
- To clean the CD, wipe it in a straight line from the center toward the edge using a soft, lint-free cloth. A cleaning agent may damage the disc! Never write on a CD or attach a sticker to it.
- The lens may cloud over when the unit is moved suddenly from cold to warm surroundings. Playing a CD is not possible then. Leave the CD player in a warm environment until the moisture has evaporated.
- Active mobile phones in the vicinity of the CD player may cause malfunctions.
- Avoid dropping the unit as this may cause damage.

## ENVIRONMENTAL INFORMATION

- All redundant packing material has been omitted. We have done our best to make the packaging easily separable into two materials: cardboard and polyethylene.
- Your unit consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packing materials, exhausted batteries and old equipment.

Both the model number and production number are located on the bottom of the set.

## CONSIGNES DE SÉCURITÉ IMPORTANTES

1. Lisez ces instructions.
2. Conservez ces instructions.
3. Respectez les avertissements.
4. Suivez toutes les instructions.
5. N'utilisez pas cet appareil à proximité d'une source d'eau.
6. Nettoyez l'appareil uniquement avec un chiffon sec.
7. N'obstruez aucun orifice de ventilation. Installez l'appareil selon les instructions du fabricant.
8. N'installez pas l'appareil près d'une source de chaleur comme par exemple des radiateurs, bouches de chauffage, cuisinières, ou autres appareils (même des amplificateurs) dégageant de la chaleur.
9. Utilisez uniquement des accessoires ou options recommandés par le fabricant.
10. Utilisez uniquement un meuble sur roulettes, un support, un pied, une étagère ou une table de type recommandé par le fabricant. Si vous utilisez un meuble sur roulettes, veillez à le déplacer avec précaution afin d'éviter tout accident corporel si l'équipement se renverse.

LIMITED WARRANTY  
PORTABLE COMPACT DISC

One Year Free Exchange  
Product must be carried in for an exchange.

**WHO IS COVERED?**  
You must have proof of purchase to exchange the product. A sales receipt or other document showing where you purchased the product is considered proof of purchase. Most stores require a copy of the original manual and keep both nearby.

**WHAT IS COVERED?**  
Warranty coverage begins the day you buy your product. For one year thereafter, defects or nonoperating parts will be replaced with a new, renewed or comparable product or repaired free of charge. A replacement product is warranted only for the original warranty period. When the warranty on the original product expires, the warranty on the replacement product also expires.

**WHAT IS EXCLUDED?**  
Your warranty does not cover:  
• labor charges for installation or removal of the product, adjustment of customer controls on the product, and repair of damage to customer premises;  
• product repair and/or part replacement because of misuse, accident, unauthorized repair or other causes not within the control of Philips Consumer Electronics Company;  
• reception problems caused by signal conditions or cable or antenna systems outside the unit;  
• "bent" lightning indicates uninsulated material your unit may cause an electrical electrical shock. For the safety of everyone in your household, please do not remove product covering;

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

**WHERE IS EXCHANGE AVAILABLE?**  
For a service center in your country, contact Philips Service Company at (800) 531-0039 to obtain the cost of out-of-warranty exchange. Then carefully pack the product and send it to the service center (address above). In Canada, call the phone number listed above under "Exchanging a Product in Canada" to obtain the cost of out-of-warranty exchange.

**BEFORE REQUESTING EXCHANGE...**  
Please check your owner's manual before requesting an exchange. Adjustments of the controls discussed there may save you a trip.

**EXCHANGING A PRODUCT IN CANADA...**  
Contact your dealer to arrange an exchange. Or ship the product, insured and freight prepaid, and with proof of purchase, to the address listed below.

**Small Product Service Center**  
Philips Service Company  
901 Springdale Road, Suite 100, Building 6  
Greenville, NC 27858

(In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

**EXCHANGING A PRODUCT IN U.S.A., PUERTO RICO OR U.S. VIRGIN ISLANDS...**

Contact your dealer to arrange an exchange. Or ship the product, insured and freight

prepaid, and with proof of purchase, to the address listed below.

**Philips Service Company**  
901 Springdale Road, Suite 100, Building 6  
Greenville, NC 27858

(In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

**REMOVING YOUR WARRANTY CARD**

Dès que l'achetez votre appareil Philips est enregistré, vous avez droit à tous les avantages dont bénéficient les possesseurs d'appareils sans tarder et vous bénéficierez de ces avantages importants.

**REMPLISSEZ ET RENVOYEZ VOTRE CARTE D'ENREGISTREMENT DE GARANTIE**

Remplissez et renvoyez votre carte d'enregistrement de garantie jointe à votre appareil sans tarder et vous bénéficierez de ces avantages importants.

**CONFIRMATION DE LA GARANTIE**

Enregistrez votre produit dans les 10 jours pour confirmer votre droit à une protection maximale selon les termes et conditions de votre garantie Philips.

**EXCHANGING A PRODUCT IN CANADA...**

Contactez Philips au (800) 531-0039 pour obtenir le coût d'un échange hors garantie. Puis emballez soigneusement l'appareil et envoyez-le à la compagnie de transport indiquée ci-dessous.

**Philips Service Solutions Group, P.O. Box 2976,**  
Longview, Texas 75606, (903) 242-4800

This warranty gives you specific legal rights which vary from state to state.

EL497E005 / MAC 4110 - 1/97

## SELECTING A TRACK AND SEARCHING

**SELECTING A TRACK DURING PLAYBACK**

Briefly press << or >> once or several times to skip to the beginning of the current, previous or next track.

→ Playback continues with the selected track, and the number is displayed.

**SELECTING A TRACK WHEN PLAYBACK IS STOPPED**

1 Briefly press << or >> once or several times.

→ The selected track number is displayed.

2 Press << or >> to start CD play.

→ Playback starts with the selected track.

**SEARCHING FOR A PASSAGE DURING PLAYBACK**

1 Keep << or >> pressed to find a particular passage in a backward or forward direction.

→ The time where playback was paused will flash.

2 Continue playback by pressing << or >> again.

4 Press << to stop playback.

→ The total number of tracks and the total playing time of the CD are displayed.

5 Press << again to switch off the player.

• To remove the CD, hold it by its edge and press the hub gently while lifting the CD.

Note: If there is no activity, the unit will automatically switch off after a while to save energy.

## PLAYBACK INFORMATION

If a CD-Recordable (CD-R) or a CD-Rewritable (CD-RW) is not recorded properly, a '5C' is displayed. In that case, use FINALIZE on your CD-recorder to complete the recording.

If you want to play a CD-Rewritable (CD-RW), it takes 3-15 seconds for sound reproduction to start once you have pressed << or >>.

Playback will stop if you open the CD.

While the CD is being read, -- flashes in the display.

## VOLUME AND BASS

Volume adjustment

Adjust the volume by using VOL << or >>.

Bass adjustment

• Press BASS to switch the bass enhancement on or off.

→ BASS is shown if the bass enhancement is activated.

## PROGRAMMING TRACK NUMBERS

You can select up to 20 tracks to play in a program.

A single track may be played more than once in the program.

1 Press PROGRAM to store the track.

→ PROGRAM flash; press << or >> to select desired track. When desired track is displayed, press PROGRAM button to confirm. Then, track number display changes to 02.

2 Select and store all desired tracks in this way.

3 Press << or >> to start playback of your selected tracks.

→ PROGRAM is shown and playback starts.

Note: -- If you try to store more than 20 tracks, the display will show program number 02 again.

Clearing the program

• While playback, press << to clear program.

Notes: -- The program also will be cleared if you

– interrupt the power supply.

– open the CD compartment lid, or

– if the unit switches off automatically.

3 For 'SCAN' and 'SHUFFLE', playback starts in the chosen mode after << or >> is being pressed.

## NOTES

It is possible to play tracks in random order, to repeat a track or the entire CD, and to play the first few seconds of each track.

1 Press MODE during playback as often as necessary until the display shows either:

→ REPEAT: The current track is played repeatedly.

→ REPEAT ALL: The entire CD is played repeatedly.

→ SCAN: The first 10 seconds of each of the remaining tracks are played in sequence.

→ SHUFFLE: All tracks of the CD are played in random order until all of them have been played once.

2 For 'REPEAT' and 'REPEAT ALL', playback starts in the chosen mode after 2 seconds.

• To return to normal playback, press MODE repeatedly until the display is clear.

3 For 'SCAN' and 'SHUFFLE', playback starts in the chosen mode after << or >> is being pressed.

## TROUBLESHOOTING

**WARNING:** Under no circumstances should you try to repair